

EN

Operating and Maintenance Instructions

Secured release, exterior (ASE)

ENGLISH4

Dear Customer,



We are delighted that you have chosen a quality product from our company.

1 About These Instructions

Read through all of the instructions carefully: they contain important information about the product. Pay attention to and follow the instructions provided, particularly the safety instructions and warnings.

Please keep these instructions in a safe place and make sure that they are available to all users at all times.


1.1 Warnings used


	<p>The general warning symbol indicates a danger that can lead to injury or death. In the text section, the general warning symbol will be used in connection with the caution levels described below. In the illustrated section, an additional instruction refers back to the explanation in the text.</p>
 WARNING	<p>Indicates a danger that can lead to death or serious injuries.</p>

2 Fitting


NOTE:

The min. bending radius of the Bowden cable is $R \geq 100$ mm. The sum of all bending radii should not exceed 360° .

 WARNING
<p>Danger of injury due to uncontrolled door movement in the Close direction</p> <p>Fitting a secured release to a door with a faulty counterbalance may result in injuries.</p> <ul style="list-style-type: none"> ▶ Before fitting, make sure that the door is in perfect condition.

 WARNING
<p>Danger of injury due to unexpected door travel</p> <p>Unexpected door travel may occur if door travel is initiated by other persons during fitting or maintenance of the secured release.</p> <ul style="list-style-type: none"> ▶ Before fitting or maintaining the secured release, disconnect the control from the mains supply and, if applicable, the plug of the emergency battery.

3 Operation

 WARNING
<p>Danger of injury when releasing the door</p> <p>If the door is insufficiently counterbalanced, persons or property may be trapped when releasing an open door.</p> <ul style="list-style-type: none"> ▶ Only operate the door if the counterbalance is in perfect condition. ▶ Only trained personnel may actuate the release!

4 Inspection and Maintenance

- ▶ The secured release function must be inspected **monthly**.

Dissemination as well as duplication of this document and the use and communication of its content are prohibited unless explicitly permitted. Noncompliance will result in damage compensation obligations. All rights reserved in the event of patent, utility model or design model registration. Subject to changes.

